

LEAF AND EXTERNAL FRAME DIMENSIONS - OPENING : 90°


EXTERNAL FRAME DIMENSIONS WITHOUT BAR	OPEN 1° LEAF DIMENSION	OPEN 2° LEAF DIMENSION	EXTERNAL FRAME DIMENSIONS WITH PUSH-BAR	EXTERNAL FRAME DIMENSIONS WITH PANIC-BAR
(X+200)	(X1+145)	(X2+130)	(NPO PUSH+350)	(NPO PANIC+410)

X = NET PASSAGE
BETWEEN FRAMES

X1 = N.P.O. 1° LEAF

X2 = N.P.O. 2° LEAF

- OPENING 90° -

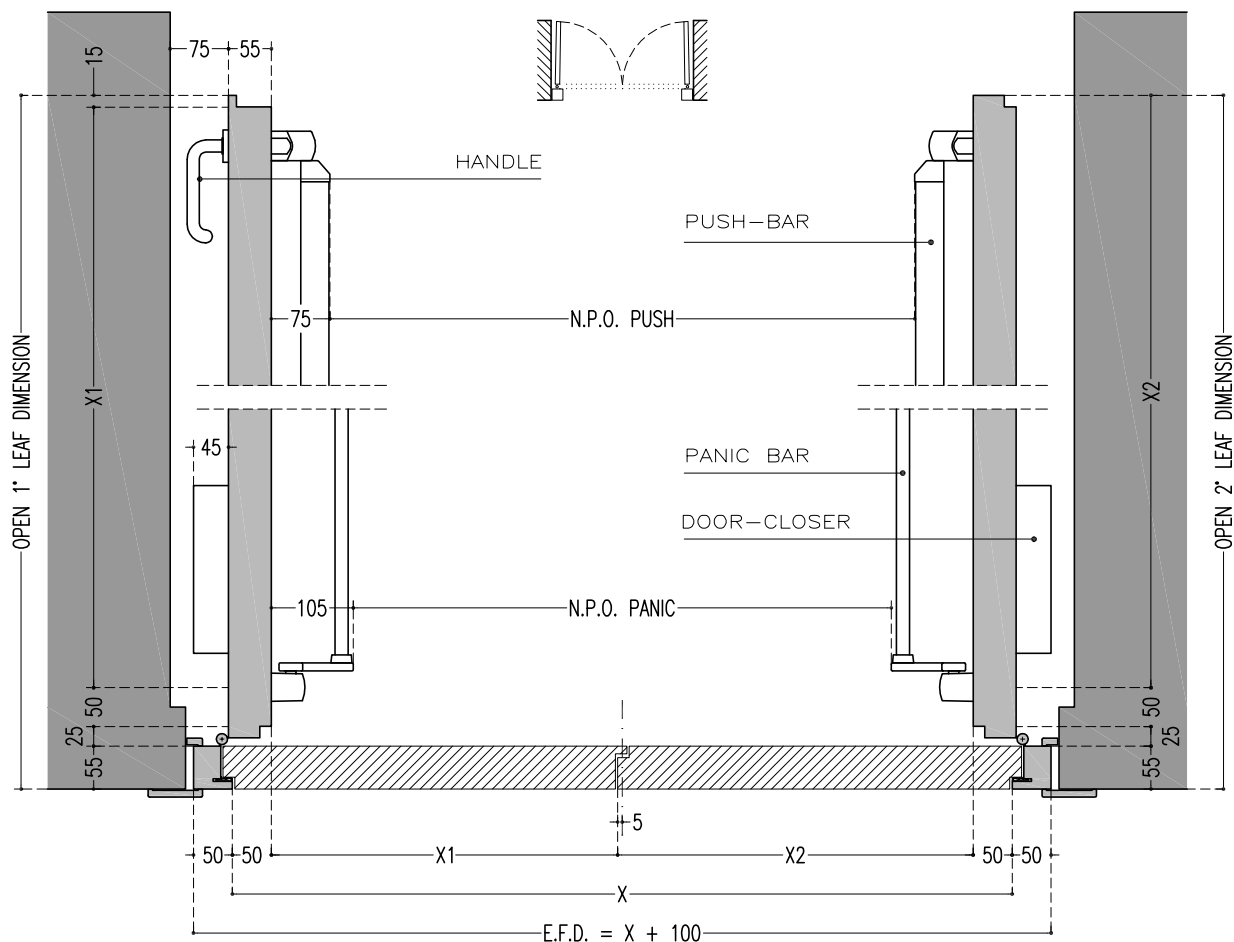

- OPENING 180° -

*check feasibility with
our technical office*

OPEN LEAF OPENING : 180°	
OPEN 1° LEAF DIMENSION	OPEN 2° LEAF DIMENSION
(X1+65)	(X2+50)

X1 = N.P.O. 1° LEAF

X2 = N.P.O. 2° LEAF

